


Installation of smart RV door lock


The smart door lock consists of an internal lock body and an external lock body and needs to be installed separately.

Notice: There is a wire connecting the external lock body and the internal lock body. Disconnect the plug carefully.

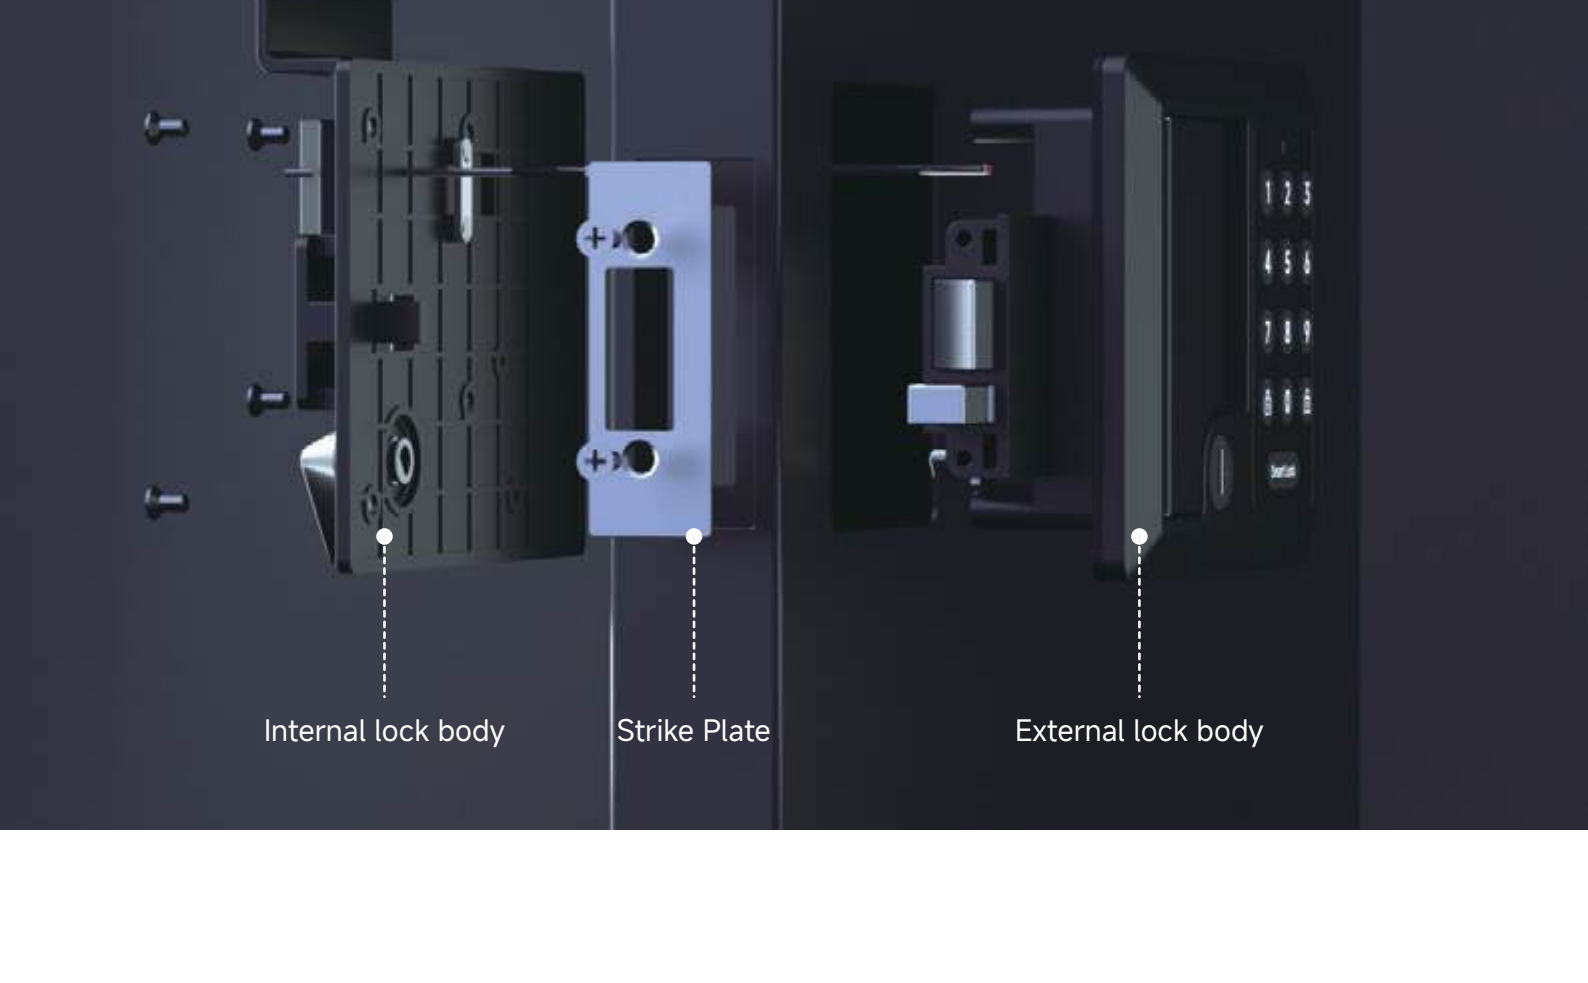


Install the smart lock


The installation hole for the smart lock: the length is 2.75 inches, the height is 3.75 inches, and the thickness is between 1.25 and 1.5 inches.

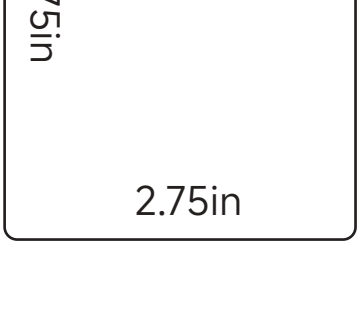

Disassemble the lock body

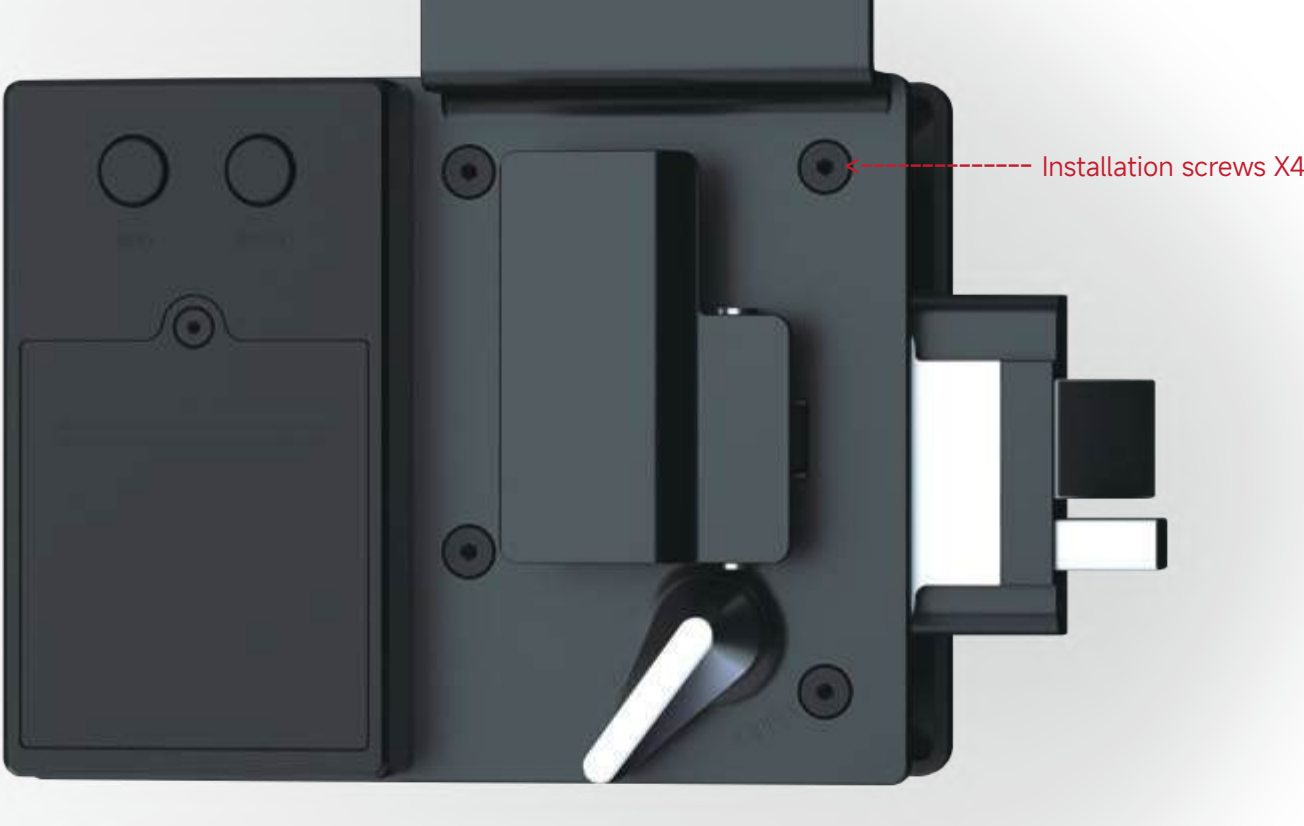

Remove four installation screws to separate the internal and external lock bodies. When disassembling, be careful not to damage the internal connecting wires.

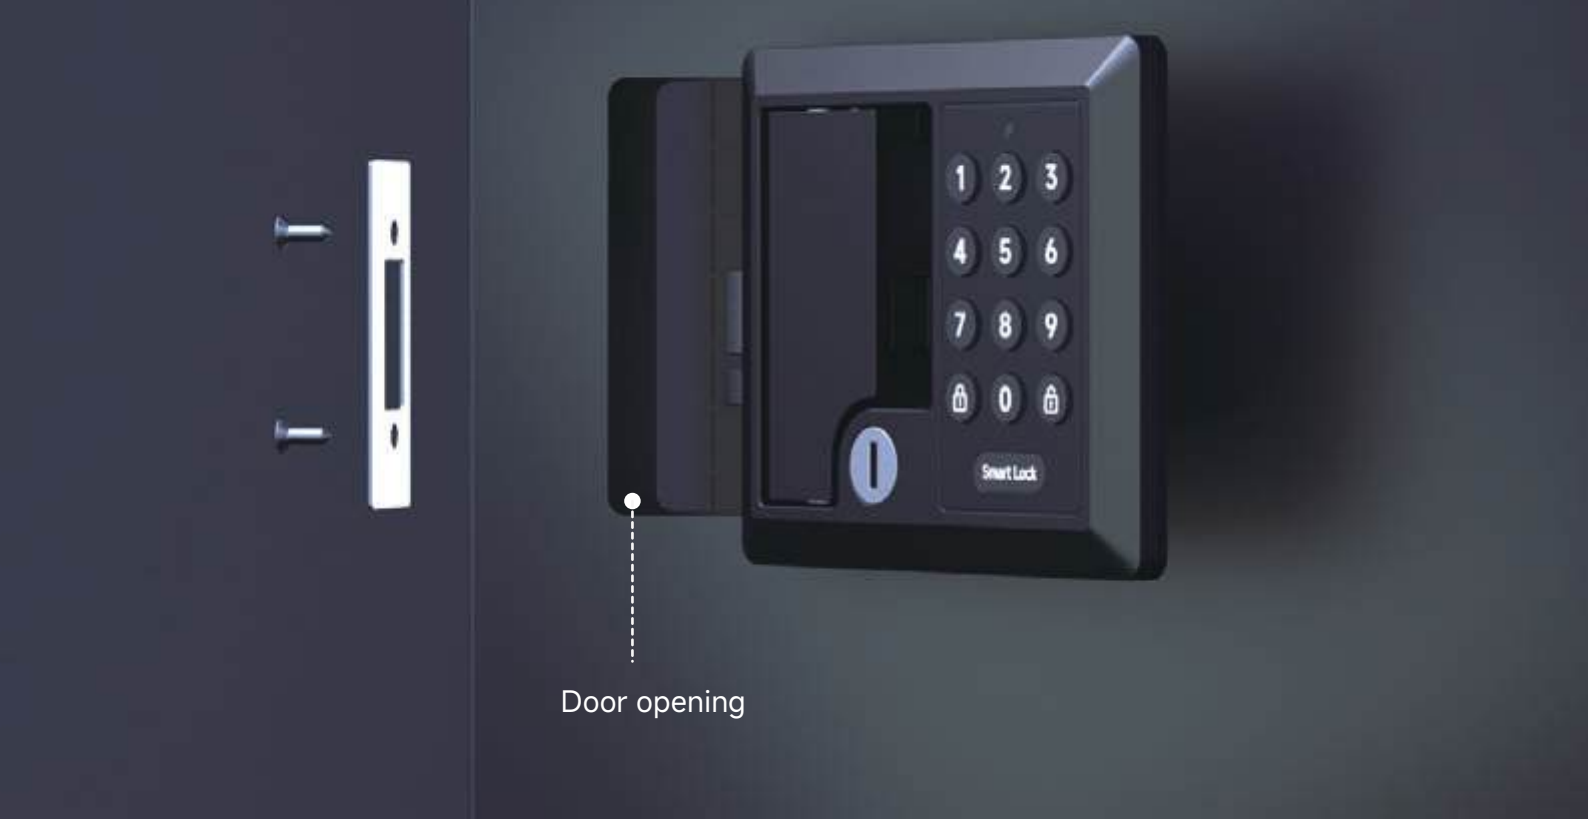

Carefully slide the external lock body into the door opening. Pay attention to protecting the wire to avoid damage.



Then install and lock the two screws of the Strike Plate. The screws for the Strike Plate are in the accessory bag.



Connect the internal and external wire plugs. Be careful not to pinch the wires and protect the wires well.



Align the marked points ① and ②, align the four screw holes. After closing, tighten the four installation screws.



Installation is complete. You can experience whether the lock is working properly when opening and closing.